




Rockfon® Timber

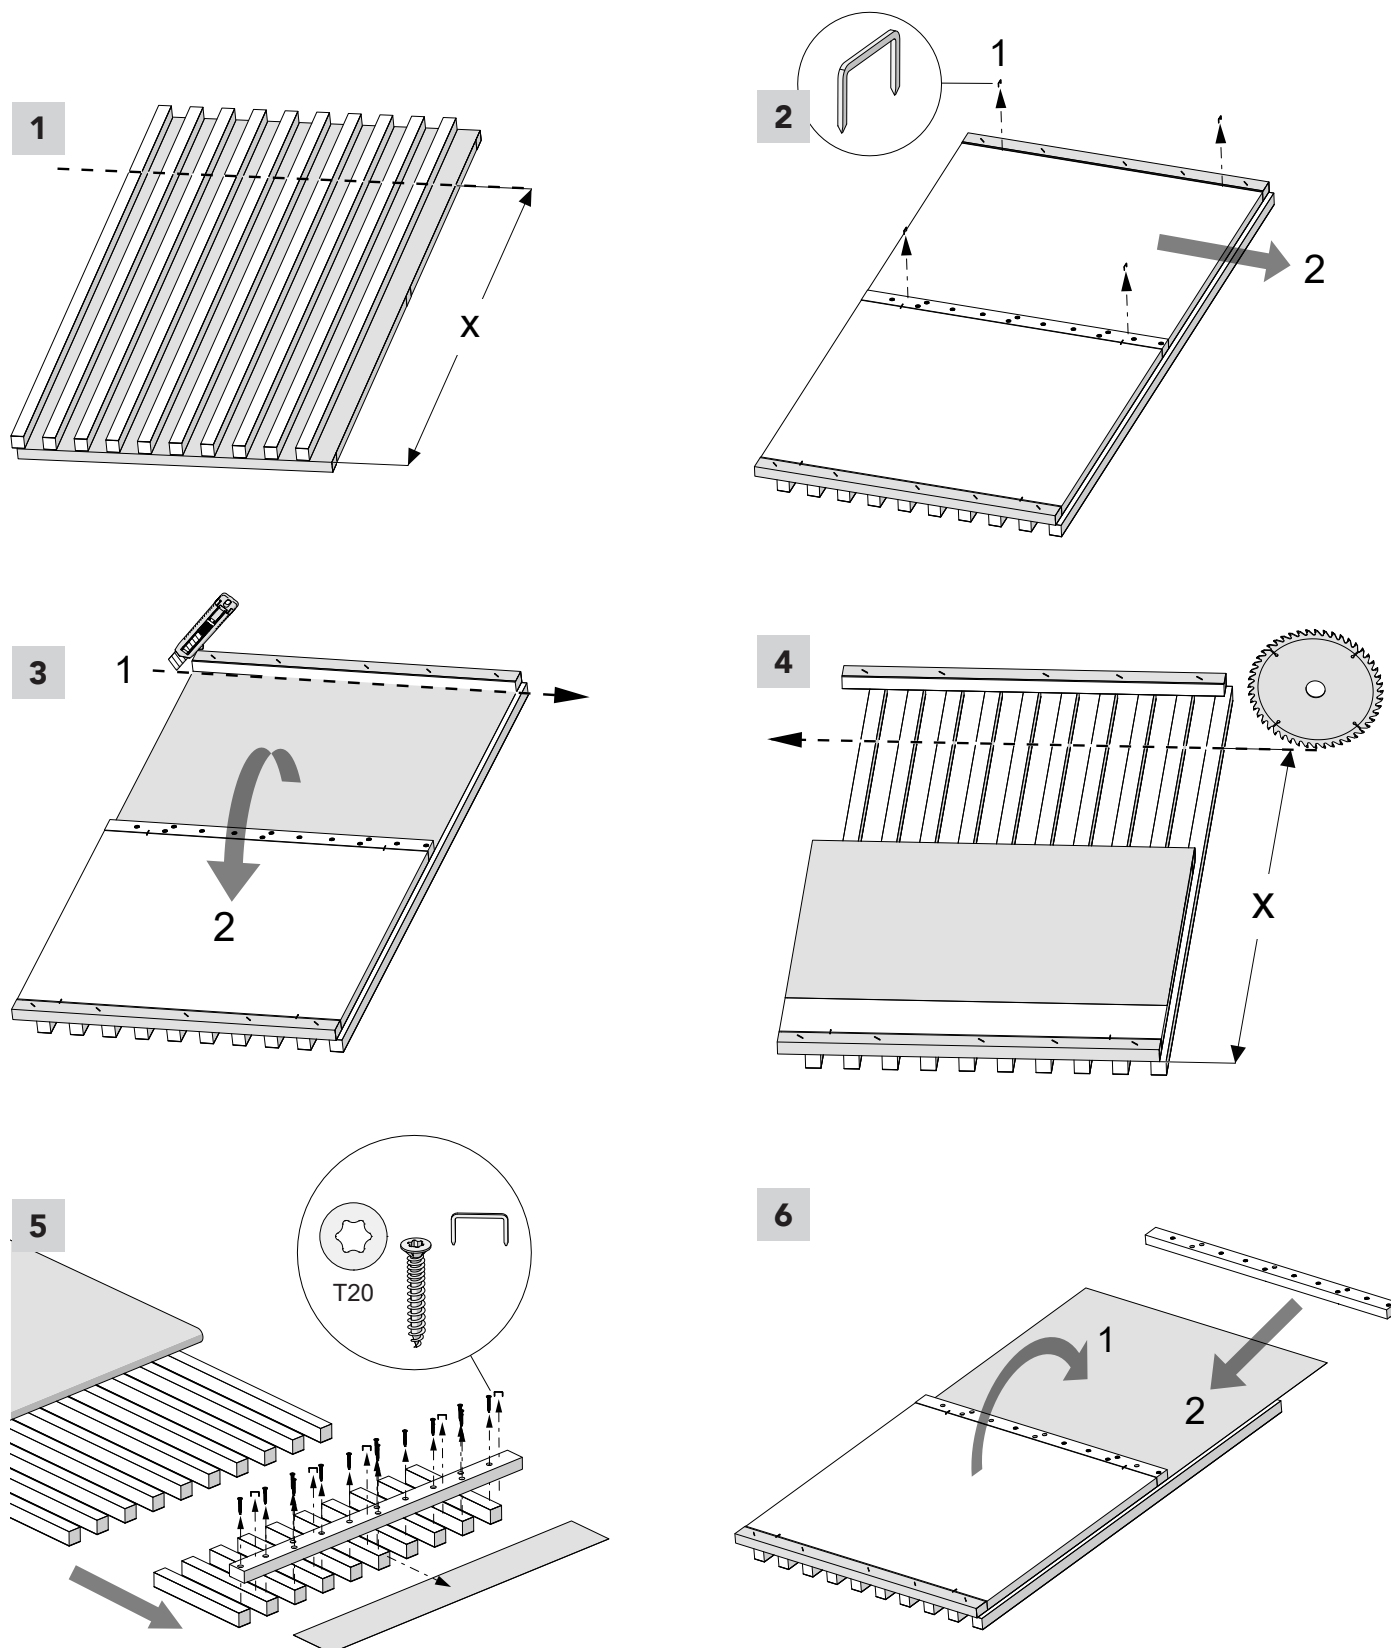


7 Hold fleecematerialet strukket mens du setter inn skruene.

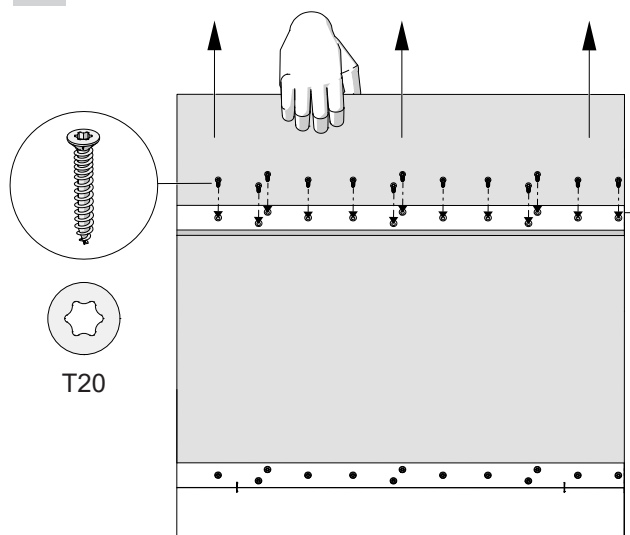


8

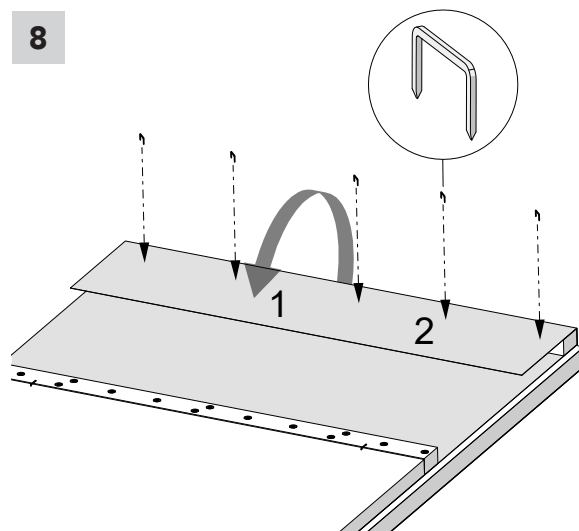


9

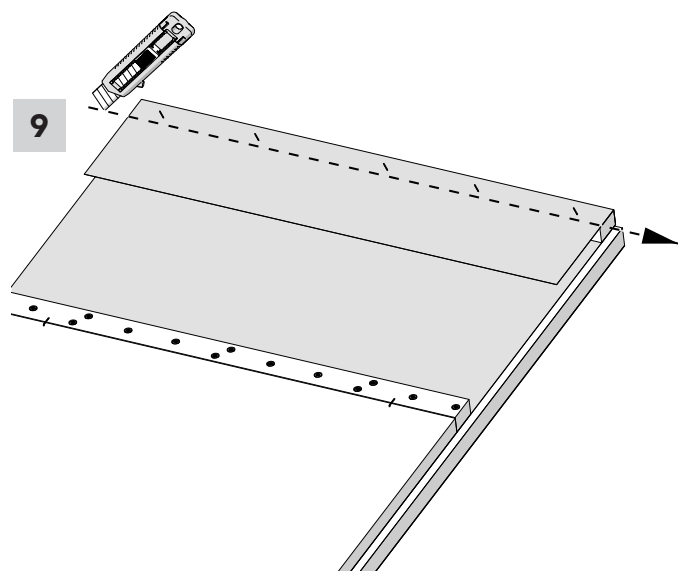

10

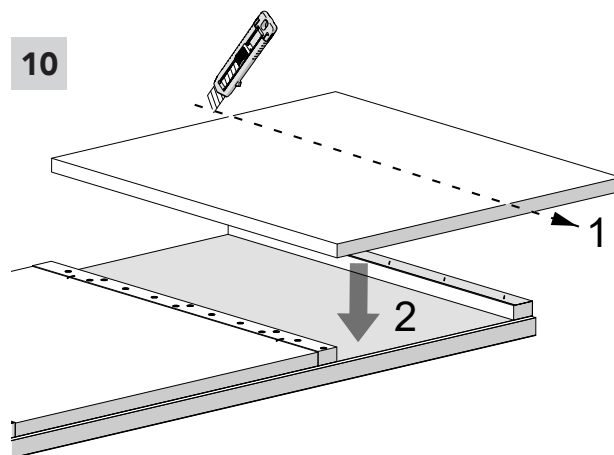

11

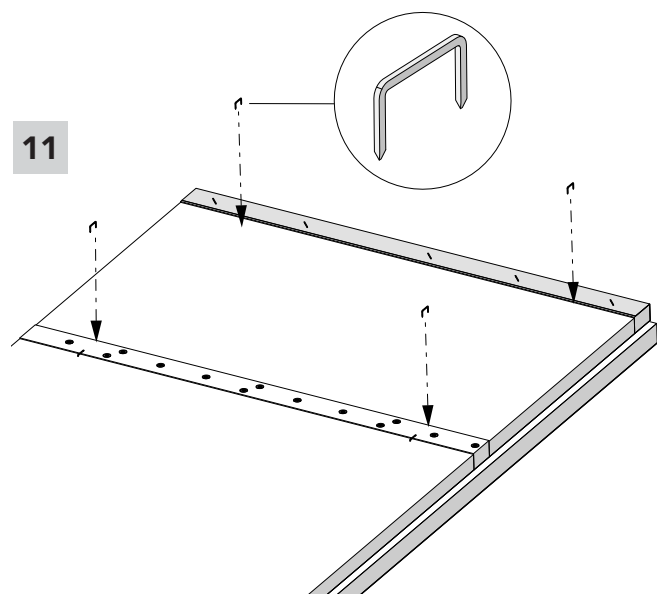

12

